

evolution  fires®

**SPECTRUM SERIES**

FLAME ROD  
GREASE

MANUAL DOWNLOAD



# How to Grease the Flame Rod

## Step 1 - Remove the Glass Screen

**IMPORTANT: UNPLUG THE FIRE FROM THE POWER SOURCE BEFORE STARTING THESE STEPS**

Remove glass - Remove the screws circled in red so the glass can be removed. The screws will be needed to reinstall the glass.

Attention: After removing the screws, hold the glass firmly to prevent it from tipping forward.





# How to Remove the Plastic Tray

## Step 2 - Remove the plastic tray

Remove the two screws circled in red to release the plastic tray.

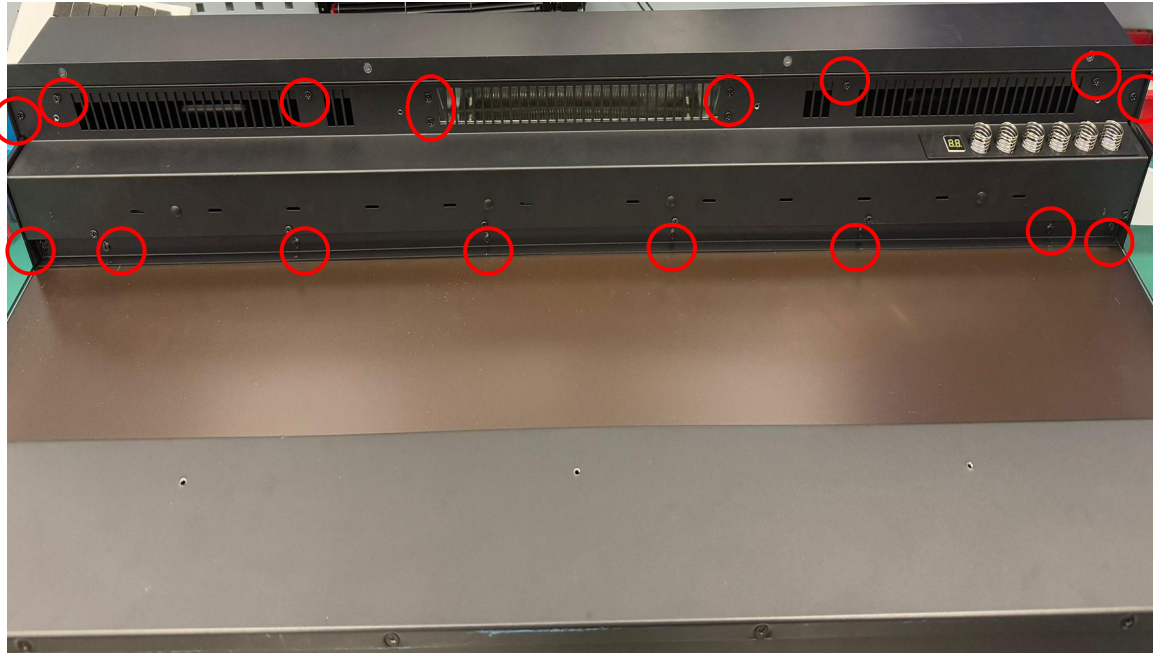


Photo after removing the plastic tray.

# How to Remove the Air Outlet Panel

## Step 3-1

1. Remove the screws circled in red so the air outlet panel can be loosened.



The air outlet panel.



## Step 3-2

2. Disconnect the connecting wires circled in red, and then remove the air outlet panel.

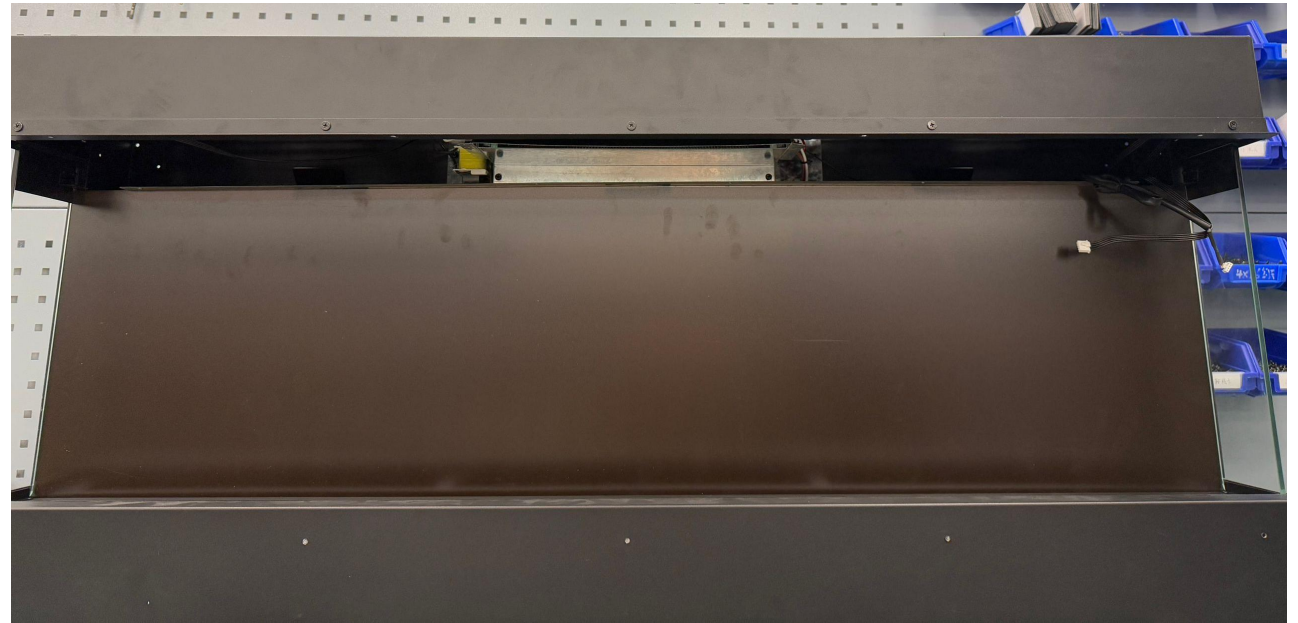


Photo after removal of the air outlet panel.



# How to Remove the Side Glass

## Step 4

Gently remove the left and right glass with your hands by pushing the top of each piece inward.



Remove the right glass

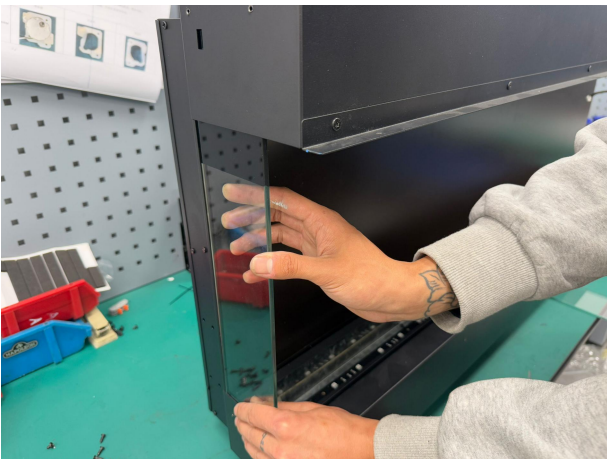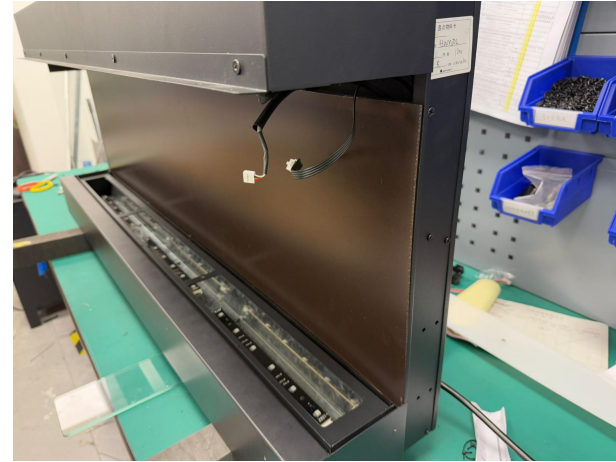

Remove the left glass





# How to Remove the Back Plastic Screen

## Step 5

After taking out the left and right glass, pull out the plastic screen by hand.



Photo after removal of the plastic screen.

# How to Remove the Flame Plate

## Step 6

Remove the 11 screws circled in red shown in images 1 and 2, and remove the flame plate.

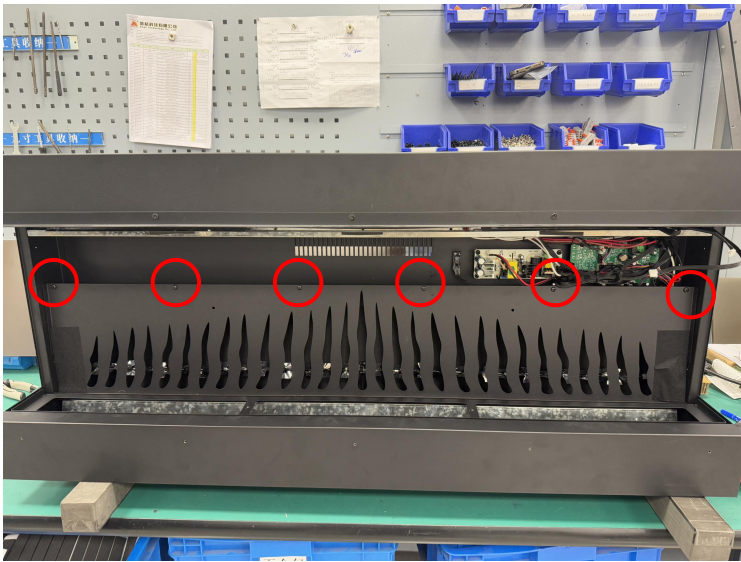


Image 1


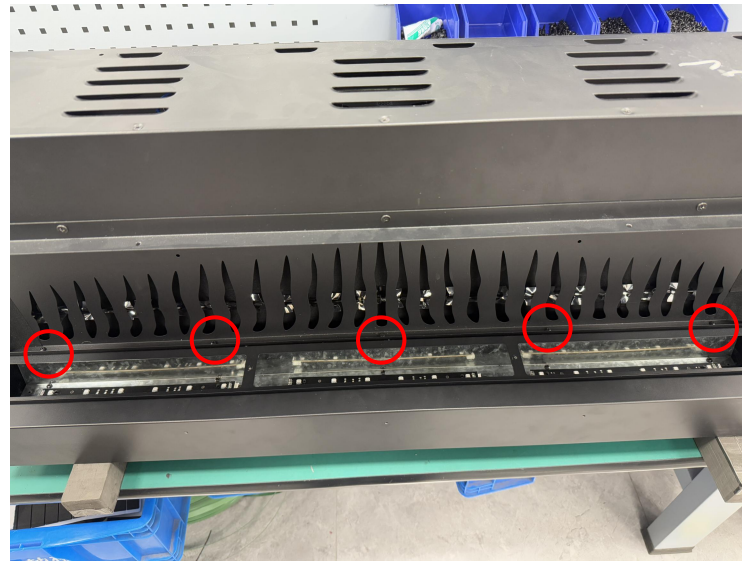


Image 2



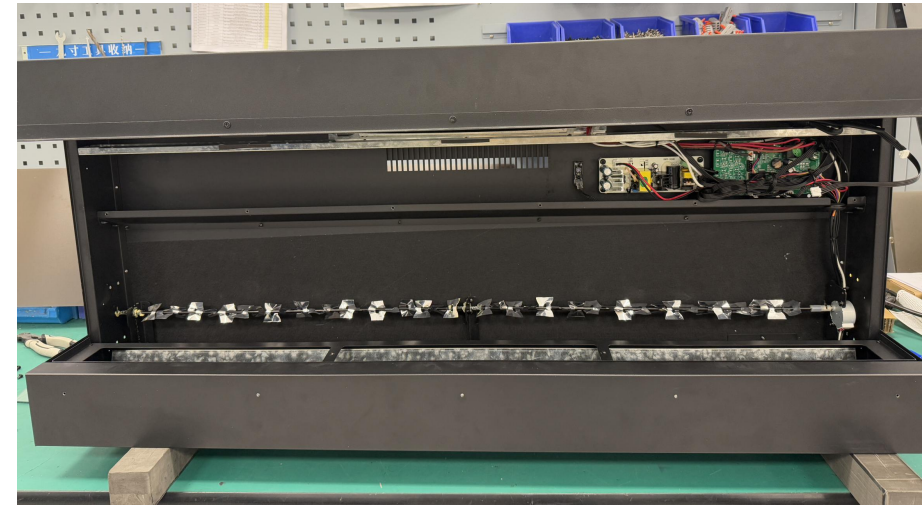

# How to Grease the Flame Rod

## Step 7

Apply grease to the two red circles using a thin brush

**Once applied slide the flame rod to the left and right to spread the grease.**



Grease inside the rubber center grommet



Grease inside the rubber grommet on the left