

SPECTRUM SERIES

Main Board Replacement

MANUAL DOWNLOAD



How to Replace the Main Board

Step 1 - Remove the glass screen

Remove glass - Remove the screws circled in red so the glass can be removed. The screws will be needed to reinstall the glass.

Attention: After removing the screws, hold the glass firmly to prevent it from tipping forward.





How to Remove the Plastic Tray

Step 2 - Remove the plastic tray

Remove the two screws circled in red to release the plastic tray.



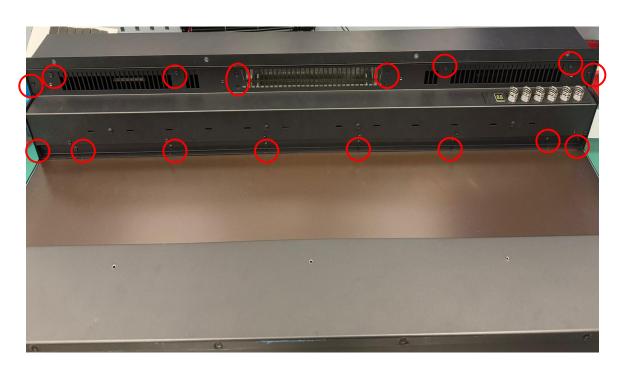


Photo after removing the plastic try.

How to Remove the Air Outlet Panel

Step 3-1

1. Remove the screws circled in red so the air outlet panel can be loosened.





The air outlet panel.

Step 3-2

2. Disconnect the connecting wires circled in red, and then remove the air outlet panel.



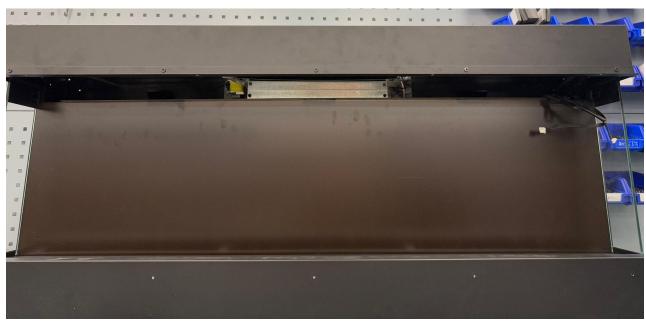


Photo after removal of the air outlet panel.


How to Remove the Side Glass

Step 4

Gently remove the left and right glass with your hands by pushing the top of each piece inward.





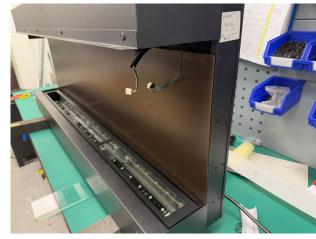



Remove the left glass



How to Remove the Back Plastic Screen

Step 5

After taking out the left and right glass, pull out the plastic screen by hand.



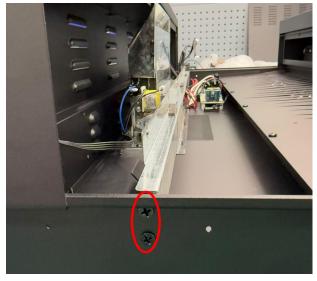


Photo after removal of the plastic screen.

How to Remove the Galvanized Bar

Step 6

Remove the 4 screws circled in red on both sides of the fire, and then take out the galvanized part. If these screws are not accessible move to step 7







Right side


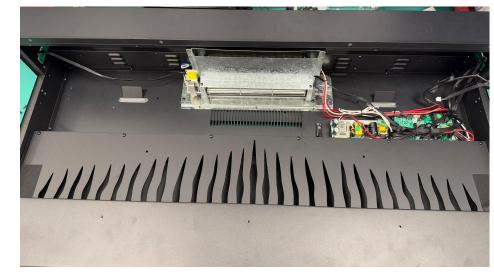


Photo after removal of the galvanized part.

Main Board

Step 7

Remove the 8 screws shown in the red circle and replace the damaged board and power board. Using the same scrws fix the new board in place

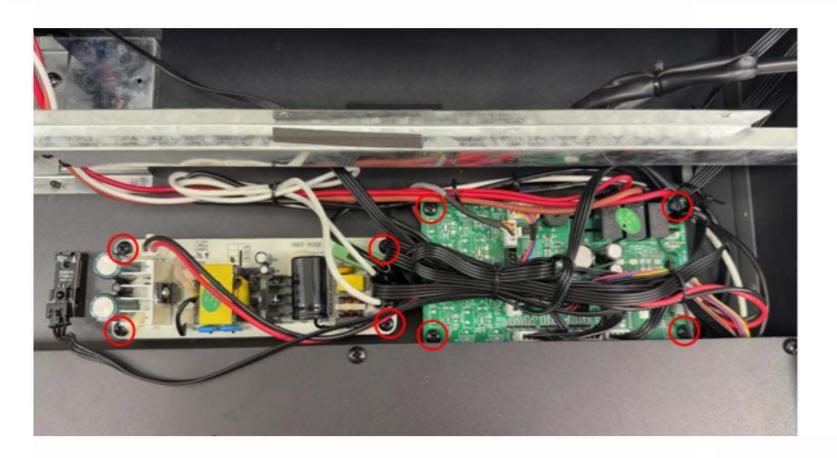

It is recommended to record the connection mode through photos before replacing the new motherboard and power board