

evolution  fires®

**SPECTRUM SERIES**

Flame Light  
Replacement

MANUAL DOWNLOAD




# How to Replace the Flame Light

## Step 1 - Remove the glass screen

**IMPORTANT: UNPLUG THE FIRE FROM THE POWER SOURCE BEFORE STARTING THESE STEPS**

Remove glass - Remove the screws circled in red so the glass can be removed. The screws will be needed to reinstall the glass.

Attention: After removing the screws, hold the glass firmly to prevent it from tipping forward.

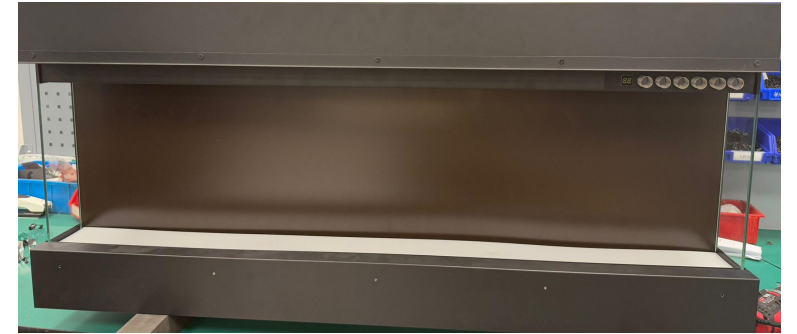

# How to Remove the Plastic Tray

## Step 2 - Remove the plastic tray

Remove the two screws circled in red to release the plastic tray.

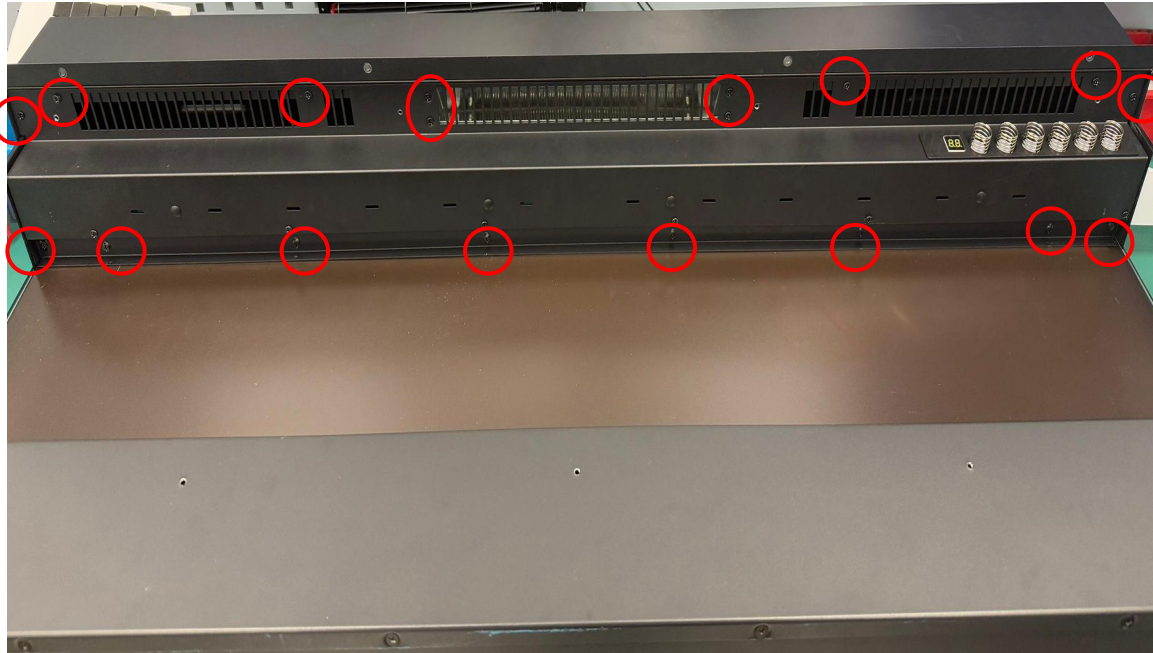


Photo after removing the plastic try.

# How to Remove the Air Outlet Panel

## Step 3-1

1. Remove the screws circled in red so the air outlet panel can be loosened.



The air outlet panel.

## Step 3-2

2. Disconnect the connecting wires circled in red, and then remove the air outlet panel.

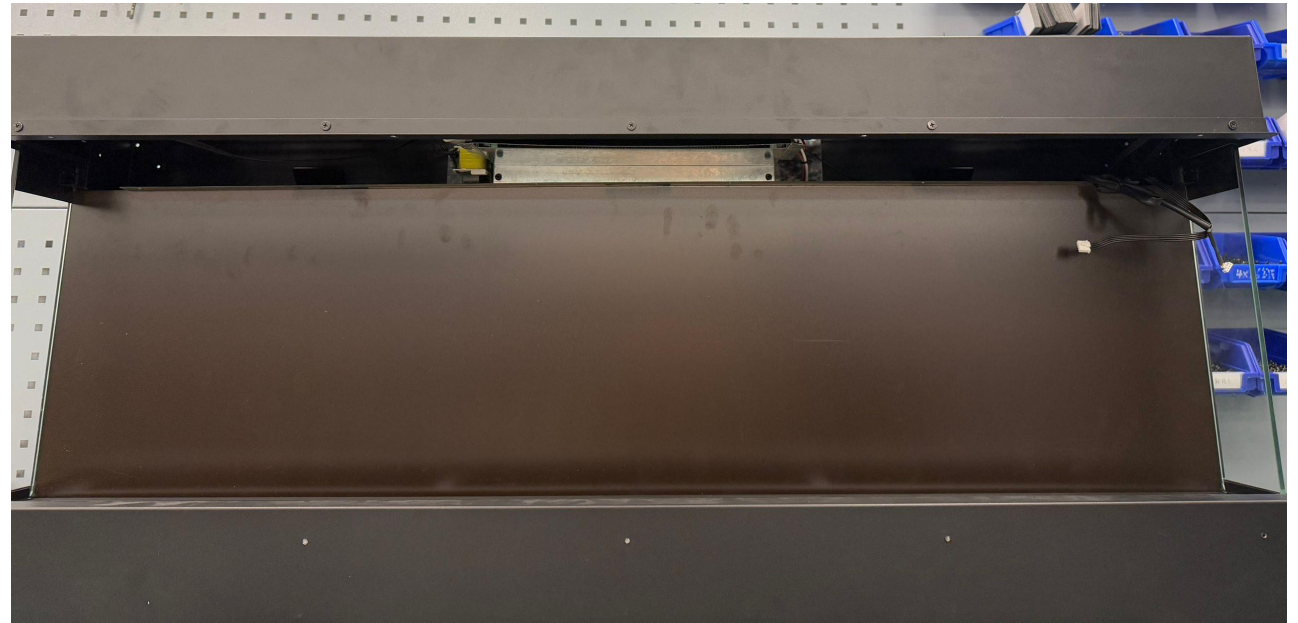


Photo after removal of the air outlet panel.



# How to Remove the Side Glass

## Step 4

Gently remove the left and right glass with your hands by pushing the top of each piece inward.



Remove the right glass

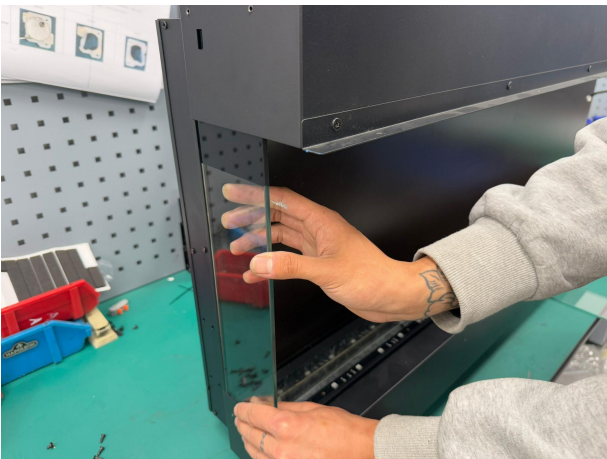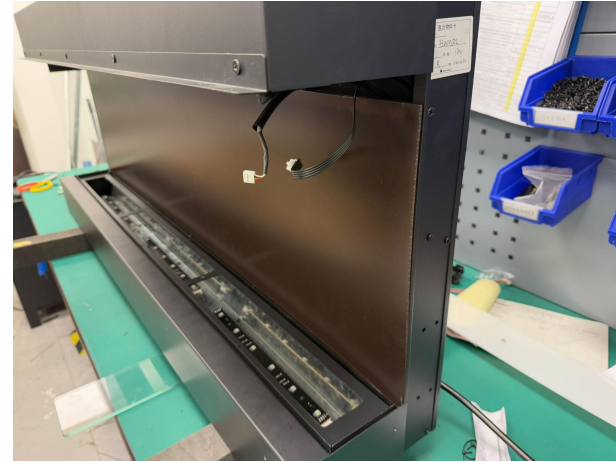

Remove the left glass



# How to Remove the Back Plastic Screen

## Step 5


After taking out the left and right glass, pull out the plastic screen by hand.



Photo after removal of the plastic screen.

# How to Remove the Flame Light

## Step 6

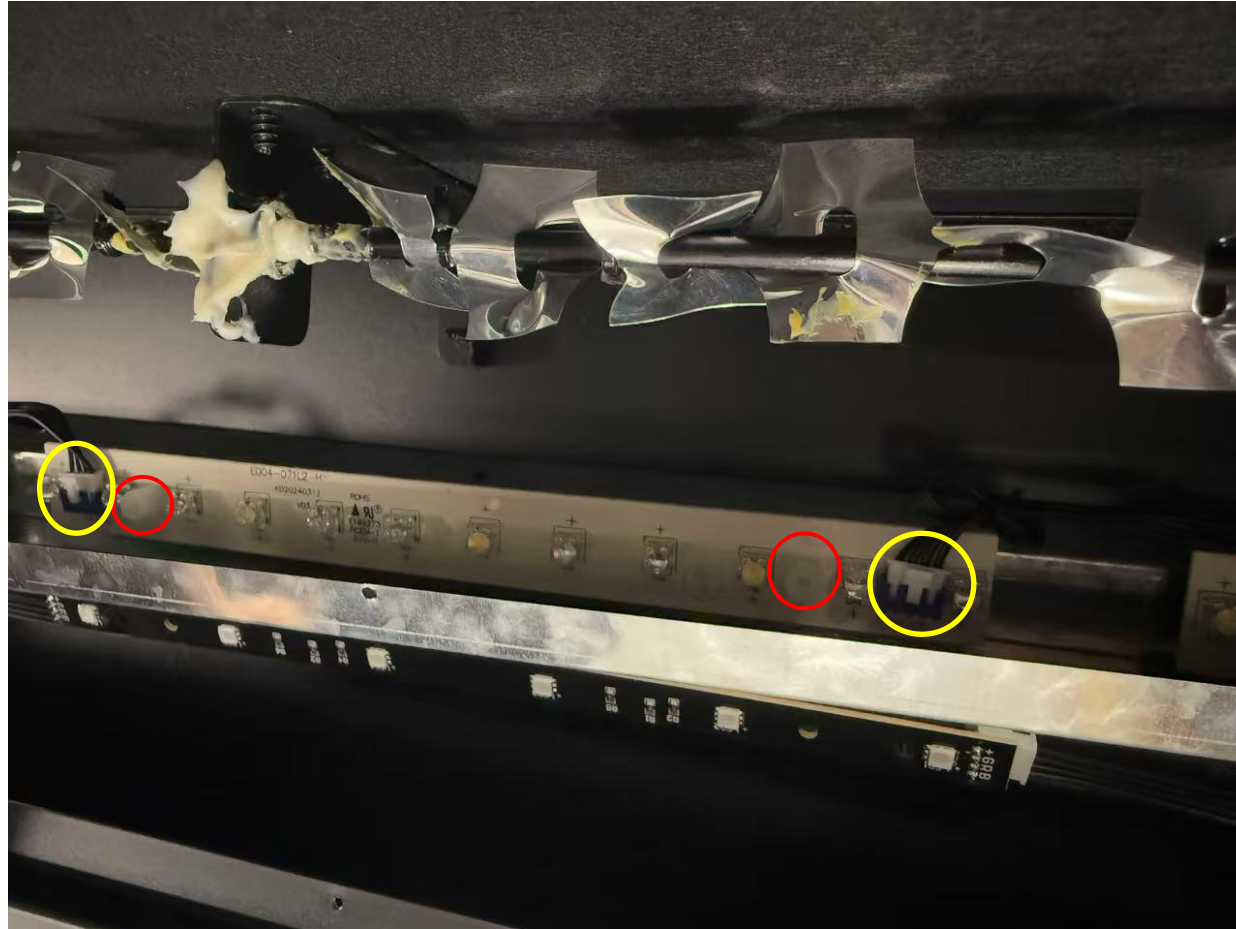

**Attention: The connection method of the light bar is based on one in and two out**

Loosen the hexagonal nylon posts shown in red circles on both sides of the fixed flame strip by hand, and then pull off the connecting wire of shown in the yellow circle to remove the flame strip.