# evolution Fires®

# **SPECTRUM SERIES**

# HEATER REPLACEMENT

# MANUAL DOWNLOAD



### How to Replace the Heater

#### **Step 1 - Remove the glass screen**

Remove glass - Remove the screws circled in red so the glass can be removed. The screws will be needed to reinstall the glass. Attention: After removing the screws, hold the glass firmly to prevent it from tipping forward.





# How to Remove the Plastic Tray

#### **Step 2 - Remove the plastic tray**

Remove the two screws circled in red to release the plastic tray.





Photo after removing the plastic try.

# How to Remove the Air Outlet Panel

#### Step 3-1

1. Remove the screws circled in red so the air outlet panel can be loosened.





The air outlet panel.

#### Step 3-2

2. Disconnect the connecting wires circled in red, and then remove the air outlet panel.



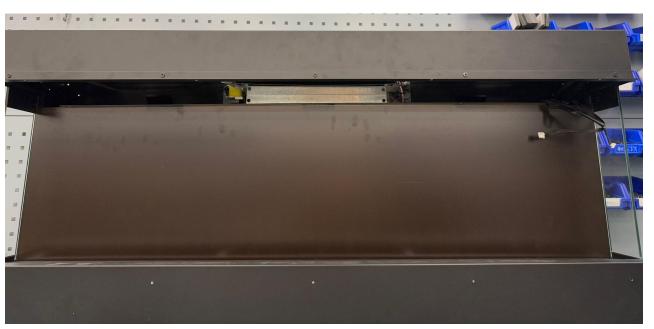


Photo after removal of the air outlet panel.

# How to Remove the Side Glass

#### Step 4

Gently remove the left and right glass with your hands by pushing the top of each piece inward.



Remove the right glass





Remove the left glass



# How to Remove the Back Plastic Screen

#### Step 5

After taking out the left and right glass, pull out the plastic screen by hand.



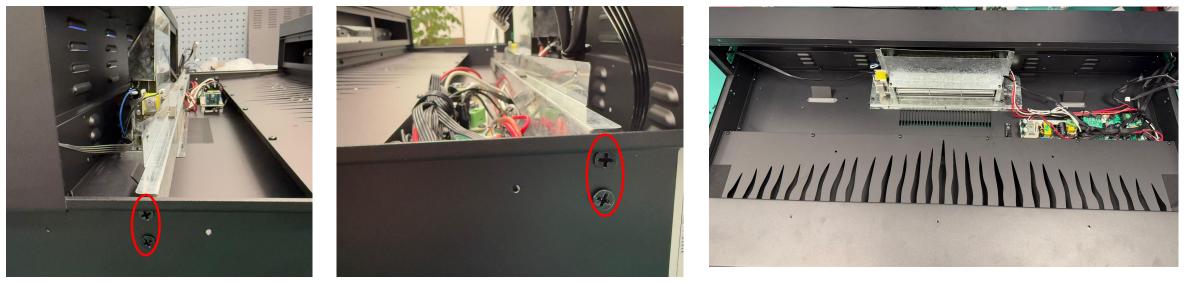


Photo after removal of the plastic screen.

# How to Remove the Galvanized Bar

#### Step 6

Remove the 4 screws circled in red on both sides of the fire, and then take out the galvanized part. **If these screws are not accessible move to step 7** 



Left side

Right side


Photo after removal of the galvanized part.

# How to Dismantle the Fan Component

#### **Step 7.1**

1, Remove the four screws circled in red to disconnect the fan motor.



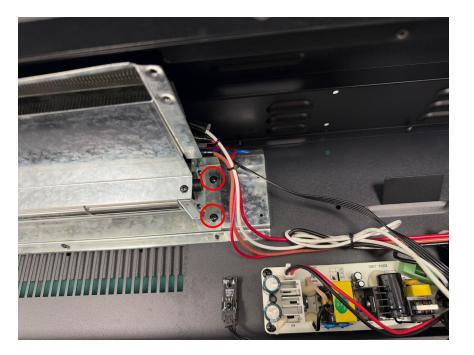

2, Remove the two screws circled in red and take out the air duct vent from the fan assembly.

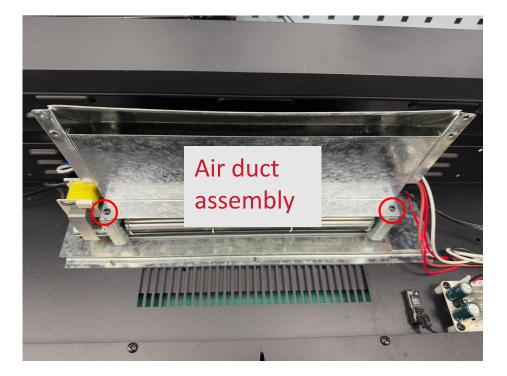




Photo after removing the air duct vent


3, Remove the 6 connecting wires circled in red from the heating element.




It is strongly recommended to record the postilion of the wires with photos before disconnecting.


4, Open the terminal circled in red, and then remove the connecting wires of the fan to free the fan component.



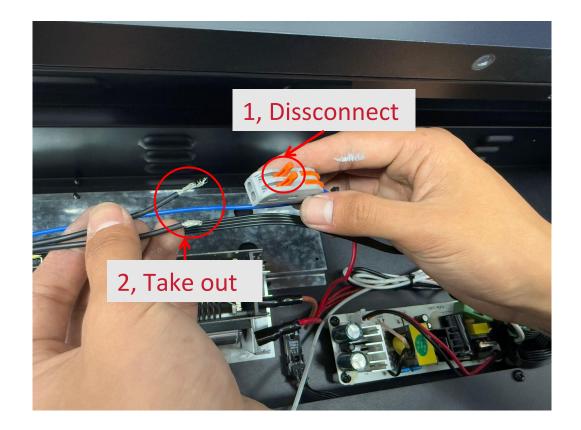


5, Remove the two screws circled in red on the back of the air duct component and the 4 screws circled in red on the bottom of the air duct component to remove the fan base.

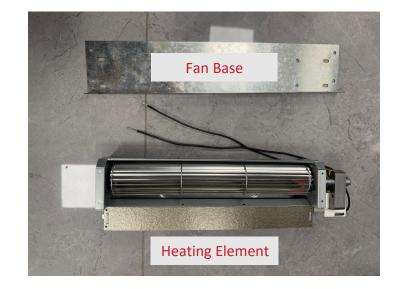

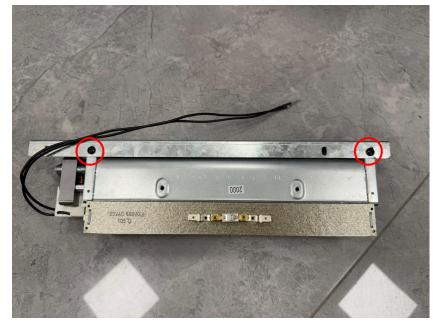

**Back View** 

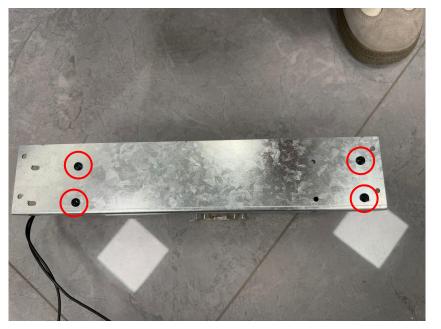

Bottom